

CARE AND MAINTENANCE GUIDE

Thank you for purchasing a Karran silicone accessory. Silicone is a highly durable, food-safe material designed to withstand everyday use. With proper care, your product will last longer and perform at its best.

REGULAR CARE

Before first use, wash your silicone product with warm, soapy water to remove any factory residues. After each use, wash with mild dish soap and water, rinse thoroughly, and allow to dry.

Your silicone product is **completely safe to clean in the dishwasher**. However, hand washing is recommended if you wish to extend the product's life and maintain its original appearance.

To avoid stains or odors, do not allow food or liquids to sit on the surface for long periods. For stubborn stains, make a paste using baking soda and water. Apply the paste directly to the affected area, let it sit on the product for 15 minutes, then rinse thoroughly and dry.

IMPORTANT TIPS

- Wash before first use.
- Dishwasher safe.
- Dry thoroughly before storing.
- Keep away from open flames and direct heating elements.
- Avoid sharp tools, knives, or metal utensils.
- Do not use abrasive pads, bleach, or harsh chemicals.
- Inspect regularly and discontinue use if torn or damaged.

Products that we recommend for cleaning your silicone accessory include the following:

- Dishwasher soap
- 50/50 White vinegar + water solution
- Baking soda

For any technical assistance or concerns, please contact us by phone at 866.452.7726 or by email at info@karran.com